 


## Digital FL137AX, FL137AB, QFOX21CA, QFOX21CB

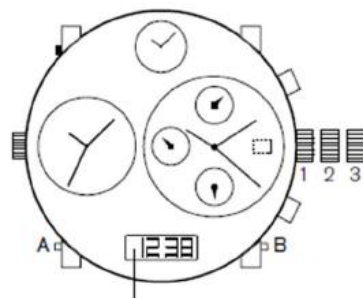

Digital FL137AX / QFOX21CA / QFOX21CB



Digital FL137AB

### NORMAL TIME DISPLAY

1. Press A to change display. Display sequence is time, calendar, seconds.
2. Press B to toggle 12/24-hour format.

 
 
### TIME AND DATE SETTING

1. Press and hold B for 2 seconds to enter setting mode; year will begin flashing.
2. Press A to advance digit; press and hold A for fast advance.
3. Press B to set and advance to next setting value.
4. Setting sequence is year, month, date, hour, minute.
5. Press B to exit setting mode.

*NOTE: Hour will be displayed in 24-hour format in time setting mode.*

*NOTE: If no pusher/button is operated for 30 seconds, all changes will be saved and the setting will automatically return to display mode.*

## Chronograph JS15, JS25, JS26

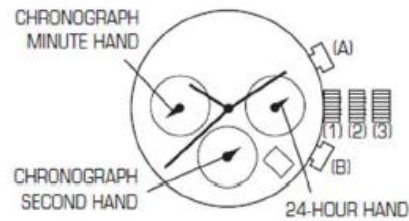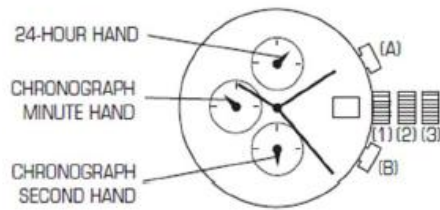

### TIME AND DATE SETTING

1. Pull crown out to position 2.
2. Rotate crown clockwise until the previous day's date is shown in the date window.
3. Pull crown out to position 3.
4. Rotate crown clockwise until the correct date is shown in the date window.
5. Continue to rotate crown to set correct am/pm time.  
*NOTE: The movement of the 24-hour hand corresponds to the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.*
6. Return crown to position 1.  
*NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.*  
*NOTE: Do not set the date between 9:00 p.m. and 1:00 a.m. to ensure accuracy.*

### CHRONOGRAPH

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

### CHRONOGRAPH ZERO RESET

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise. Each press of A or B will move the chronograph hands by one increment/decrement. Or press and hold A or B for fast increment/decrement.
3. When both hands are in the zero position, reset time and return crown to position 1.  
*NOTE: Chronograph minute hand will synchronize with chronograph second hand during chronograph zero reset.*