


DIGITAL WATCH WITH VERTICAL TIME DISPLAY

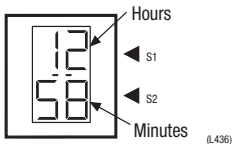

S1 – Mode Button

S2 – Set Button

DISPLAY MODES:

The watch has three display modes: TIME, CALENDAR and SECONDS.

To change from one display mode to another, press S1 button once.

NOTE: In CALENDAR mode, the watch will automatically return to TIME mode if there is no buttons pressed for approximately 3 seconds.

TO SET THE TIME AND CALENDAR:

1. Press S1 button to select TIME mode.
2. Press S2 button twice, the month digits will be displayed.

3. Press S1 button to set the month digits. Holding down the button will speed up the process.
4. Press S2 button, the date digits will be displayed.
5. Press S1 button to set the date digits.
6. Press S2 button, the hour digits, colon and A or P (representing A.M. and P.M. respectively) will be displayed.
7. Press S1 button to set the hour digits.
8. Press S2 button, colon and the minute digits will be displayed.
9. Press S1 button to set the minute digits.
10. Press S2 button, the hour digits, colon and the minute digits will be displayed.
11. When finished making all the settings, press S1 button to confirm. The colon will blink.